COLORBEAM®
PROFESSIONAL LED LIGHTING

User Guide

D350-D4

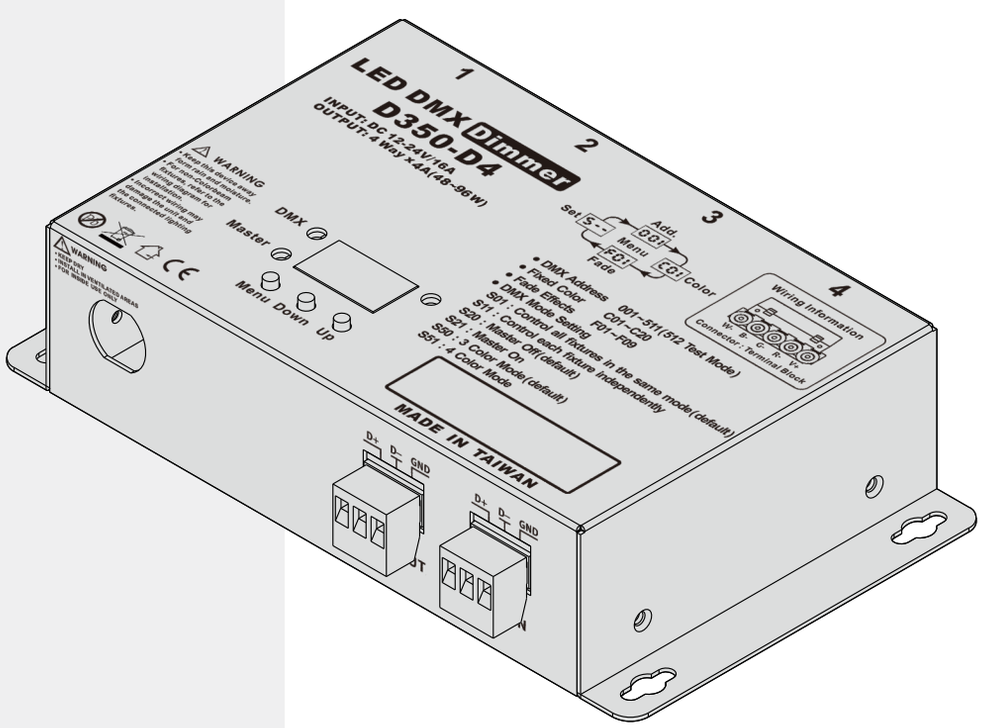

LED DMX DIMMER 350 D4
Control Systems

Version 1.0 December 2014

SPECIFICATION

Electrical

Power Voltage : 12-24VDC / 16A(Max.)
Power Consumption : 350W
Power Output : 4 way*4A (48-96W)
Protocol: USITT DMX512-A
Fuse: 4A / 250V × 4pcs

Communication

DMX Connecter: Terminal Block 3P
Output Connecter: Terminal Block 5P

Housing

Dimension(mm) : L178 × W100 × H41
Weight : 0.64 KG
Material: Metal
Color: Black

Listing

Certifications: CE / RoHS / WEEE
Fixture Warranty: 1 Year

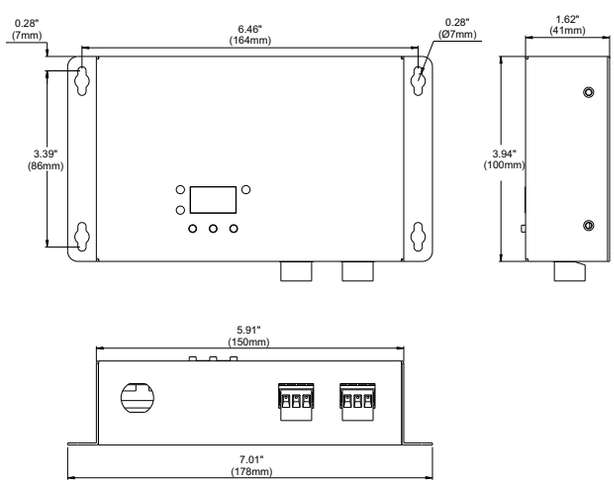

Feature

1.12-24VDC input voltage offer a maximum 350 Watts power consumption.
2.The dimmer is compatible with the IR remote
3.Detached from power supply, the compact size offers a smooth wiring under construction.
4.Dimmable for constant voltage 4-color fixtures.
5.5-Pin terminal block for fixtures makes the wiring easier.
6.3-Pin terminal block for DMX makes it more convenient for installation.

FUNCTION SCHEMA
WIRING DIAGRAM

FUNCTION SCHEMA

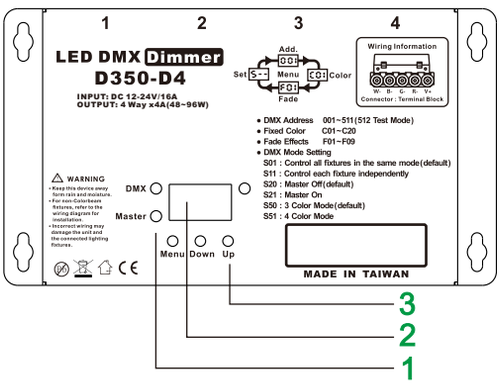

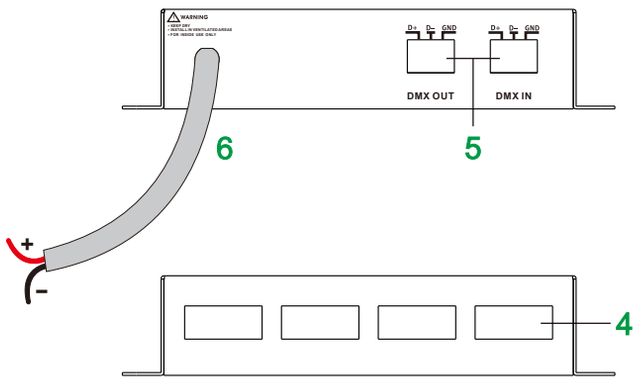

1. Signal Indicator
2. Seven-Segment Display
3. Function Key
4. Output Connecter 5-Pin Terminal Block
5. DMX Connecter 3-Pin Terminal Block
6. 12-24VDC

WIRING DIAGRAM

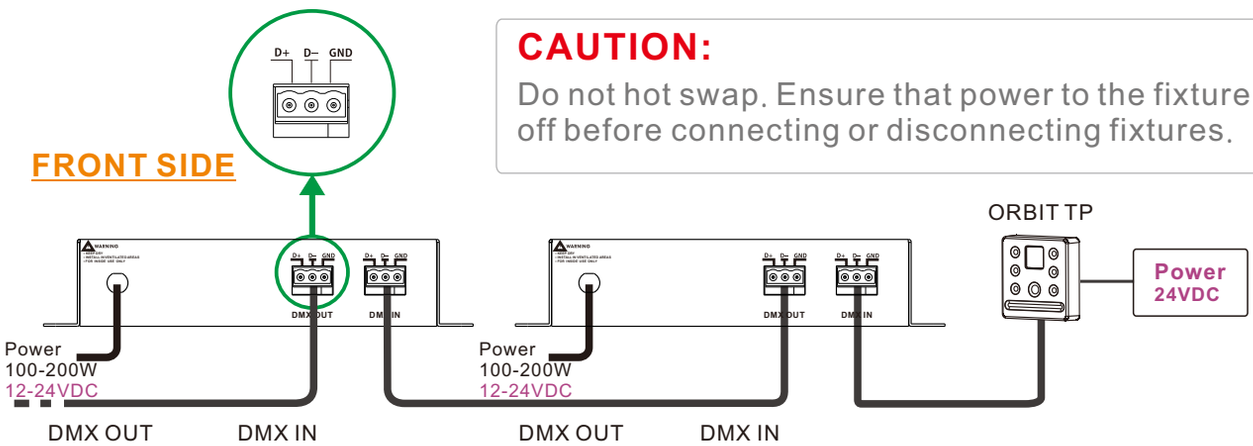

CAUTION:

Do not hot swap. Ensure that power to the fixture is off before connecting or disconnecting fixtures.

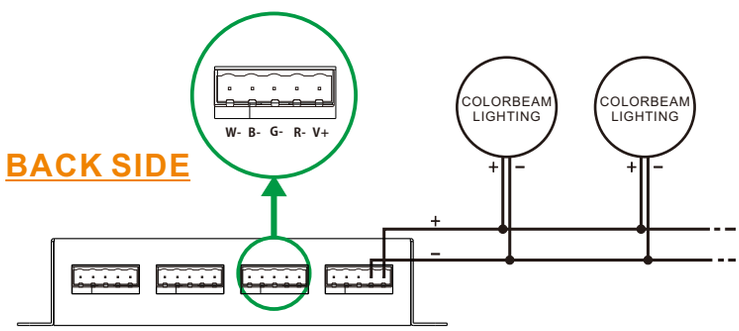

NOTICE:

1. Please notice the idea of the wiring for all Colorbeam fixture is in series connection.
2. The wiring of the customized is different from the commercially available. Please refer our accessory RJ-2 and RJ-3 to do the extension and the split.
3. The warranty will be invalid when the fixture is not under normal usage (including trimming the cable and do wiring by user).
   Please contact with your sales representative for the detailed information if the trimming will be happen.

WARNING

Read the instructions carefully before you install or powering!

CAUTION!
Be careful with your operations.
You can suffer a dangerous electric shock when touch the wires inside the unit.

1. Safety Instructions

Every person involved with installation and maintenance of the this device has to :
-be qualified.
-following the instructions of manual

Please make sure that there are no obvious transport damages.

Please immediately contact the local dealers as the device is in fault operation or damage.

Damages caused by the disregard of this user manual or unauthorized modification to products are not subject to warranty.

Important

Keep this driver away from rain and moisture.
Unplug mains lead before opening the housing.
Make sure the plug is tightly connected with outlet.
Make sure all connector are connected properly.
Make sure the AC power that complies with local electrical codes.
Do not expose the device to heat source, corrosive, flammable or explosive area.
Do not block any of ventilation openings.
Do not open the device and try to repair the device personally.

2. Operation Determinations

The device must only be used indoor.

CAUTION!
For non-Colorbeam fixtures, refer to the wiring diagram for installation.

If the device has been exposed to drastic temperature fluctuation, do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Only operate the device after having checked the housing which is firmly closed and all screws are tightly fastened. Do not shake the device. Avoid brute force when installing or operating the device.

Operate the device only after having familiarized with its functions. Do not permit operation by persons who are not qualified for operating the device. Most damages are the result of unprofessional operation!

The maximum ambient temperature 40 degree must never be exceeded.
Please consider that unauthorized modifications on the device are forbidden due to safety reasons!

OPERATION

Attention: It is important to read this manual before you install or use this product.

1. Turn on / off the power

2. Fixed Color (20 colors):
   There are 20 built-in fixed colors in the device. Press **Menu**, the display will show "**C--**" on the display. Then the user can press **Down** or **Up** to select the desired color from C01~C20.
   Note:
   In S50 mode: 20 fixed color (C01-C20)
   In S51 mode: 21 fixed color (C00-C20)

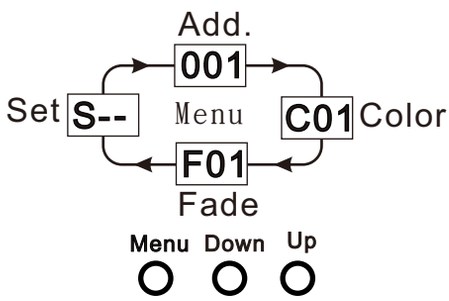

DMX No.	Mode
S01	Control all of LED fixtures in the same channel (default)
S11	Control all of LED fixtures independently
S20	Master off (default)
S21	Master on
S50	4CH - 3 Color (default)
S51	5CH - 4 Color

3. Fade Effect (9 colors):
   There are 9 built-in fade programs in the device. Press **Menu**, the display will show "**F--**" on the display.
   Then the user can press **Down** or **Up** to select the desired fade program from F01~F09.
   The fade time of the effect can be changed from 01~99% (0.5~50 sec).
   e.g. F03 is running, the fade time can be changed by pressing **Menu** and **Hold** for 5 seconds. The display will show "S--" on the display.
   The fade time can be adjusted from 01 to 99% by pressing **Down** and **Up**, and confirm the adjustment by pressing **Menu**.

Note:
The slave drivers must be set add. 001 when running Master / Slave function.

4. DMX Address Setting:
   Press **Menu** and the display shows the initial DMX address "**001**" . The user can select the desired address from 001~511 by pressing **Down** or **Up**.
   DMX address "**512**" is test mode.

OPERATION

5. DMX Mode Setting:

The following mode can be selected by pressing **Menu** to confirm it. Press **Menu** first and the display shows "**S--**". And press **Down** or **Up** to select the desired program from S01~S21.

6. Signal Indicator:

(1) Receive Master Signal: The green light shows when the lighting fixture has been set as **Master**.

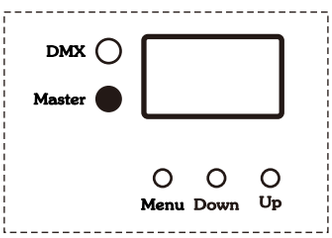

(2) Receive DMX Signal: The green light shows when the lighting fixture is receiving DMX Signal.

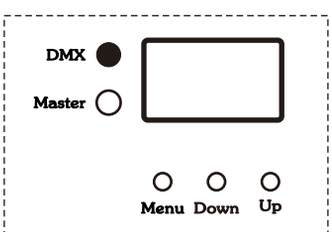

7. Sleeping Mode:

The control unit will go into **Sleeping Mode** automatically in the event of no instruction from the keypad after 1 minute. Under Sleeping Mode, the control unit is functional but the display is off and the keypad is locked. To leave the Sleeping Mode, the user can press **Menu** and hold for 5 sec. till the display is on. When using the DMX Address to control the lighting fixture, the Sleeping Mode will start after 30 sec. Press **Menu** and hold for 5 sec. to leave the Sleeping Mode.

OPERATION

T-021

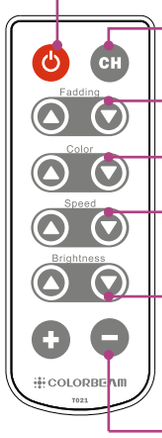

1、Press the button「⏻」to turn On/ Off the device.

2、Press the button「CH」enter sleeping mode. At this point the screen on the controller display disappears, press「CH」again for 6 seconds to start operation.

3、Press「▲」and「▼」button to select fading mode.

4、Press「▲」and「▼」button to select fixed color mode.

5、Press「▲」and「▼」button to adjust the fading speed. Operate with remote. control only.

6、Press「▲」and「▼」button to adjust the brightness. This function is only operate with remote control only, the controller itself does not.

Note: In fading mode, the lowest brightness can only be adjust in 100 (Range :100-255)

7、Press「+」and「−」button to set up the DMX address, it can be set in any mode during operation.

Note: When connect DMX console or in S21 mode (Master On), the slave device can't operate by remote control.

INFORMATION

ORDER

POWER		
ITEM	Spec.	PART NUMBER
D350-D4	Dimmer Controller	GORC1502
ORBIT TP	CONTROLLER	GOBC0111
MEAN WELL Power	NES-350-24	B021019441

COLORBEAM CO. LTD.
314, 3F., No. 87, Minguang E. Rd.,
Taoyuan City, Taiwan 33052
TEL : +886 3 335 7716
FAX : +886 3 331 3386
E-MAIL : sales@colorbeam.com
W : www.colorbeam.com